

DMX CONTROL

3 CHANNELS

MODE 3 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

8 CHANNELS

MODE 8 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	STROBE/AUTO SPEED No Function Strobe slow to fast	000 - 010 011 - 255
	AUTO SPEED SLOW TO FAST Speed slow to fast	000 - 255
6	COLOR No Function Color Macros	000 - 015 016 - 255
7	AUTO MODE No function Pulse effect 0-100% Pulse effect 100%-0 Pulse effect 100%-0-100% Auto fade transition Auto snap transition (3 colors) Auto snap transition (7 colors)	000 - 010 011 - 050 051 - 090 091 - 130 131 - 170 171 - 210 211 - 255
8	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255