

DMX CONTROL

5 CHANNEL

MODE 5 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	ZOOM 0~100%	000 - 255

7 CHANNEL

MODE 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No Function Slow to fast	000 - 010 011 - 255
7	ZOOM 0~100%	000 - 255

10 CHANNEL

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	COLOR MACROS No Function Color Macros	000 - 015 016 - 255
7	STROBE No Function Slow to fast AUTO SPEED Slow to fast	000 - 010 011 - 255 000 - 255
8	AUTO MODE RGBW mode Pulse effect 0~100% Pulse effect 100%~0 Pulse effect 100%~0~100% Auto fade transition Auto snap transition (4 colors) Auto snap transition (15 colors)	000-010 011-050 051-090 091-130 131-170 171-210 211-255
9	DIMMER SPEED Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000-051 052-101 102-152 153-203 204-255
10	ZOOM 0~100%	000 - 255